

OBD Tracker Fitting Guide

Fitting time approx 5 mins



1 Preparation

2 Location

3 Fitting


4 Activation

Tools Required: Zip Ties, Cutters, Flat Blade Screwdriver

1 Preparation



- For light vehicle installation, the OBD2 Tracker must be fitted inside of the cab as it is NOT waterproof.
- The OBD2 Tracker contains an internal battery and will send an alert message if removed from vehicle.
- Identify the plugs on cable as shown in image on right

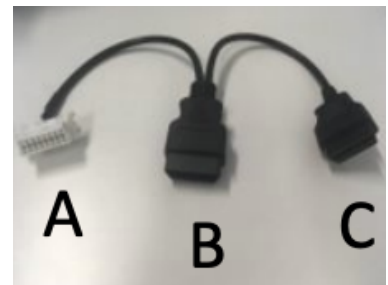

2 Location

- Identify where the OBD port is in the vehicle
- The tracker should be located away from areas where it can become damaged. It should have no metal obstruction between the box and the sky for best results. It should not be in direct vision of people entering the vehicle
- The tracker should not impede the operation of vehicle and all cables must be out of the way of driver/ operator

3

Fitting



Connect the device

- Turn vehicle off if it is running
- Un-click and push the pre-existing OBD port out of dash receptacle
- Connect part B of the Y splitter cable to the original OBD port
- Connect part A of the Y splitter cable into the dash receptacle where the OBD port came out of
- Attach the OBD2 Tracker to the part C of the Y splitter cable
- Zip tie the device to a fixed point under the dash as close to the sky as possible and tidy cables up to make non-visible

Test the device

- Wait 3-5 minutes and start the vehicle (The device will be registering on the network and obtain GPS fix)
- Ensure all cables and zip ties are tidy and out of sight

4

Activation



- Start the asset and let it run for 5 Minutes
- Turn asset off and scan the QR Code with your phone
- Ensure you have available; Asset Number, Tracker number, Rego, Make/Model/Vin No.
- Follow the steps through the activation app

**Please call 1300 110 248 If you have any issues
with the activation for assistance**